

TIMEX® INSTRUCTIONS

SPECIAL EXTENDED WARRANTY OFFER

SPECIAL EXTENDED WARRANTY OFFER

5 YEARS FOR 5 DOLLARS

For \$5, Timex will extend the enclosed one year limited manufacturer's warranty for an additional 4 years from date of purchase. This 5 year warranty covers repairs on your watch under the same terms and conditions as set forth in the manufacturer's warranty in this booklet.


Payment can be made with AMEX, Discover, Visa or MasterCard by calling 1-800-448-4639 during normal working hours or you can mail a check to: Timex Extended Warranty
P.O. Box 1676, Dept. EF
Little Rock, AR 72203.

We will need your name, address, telephone number, date watch purchased and 5 digit watch model number.

Payment must be made within 30 days after date of purchase.

PLEASE READ THIS BOOKLET CAREFULLY to familiarize yourself with the operation of your Timex watch and with the Limited Warranty.

 SECTION 1 – WATER-RESISTANCE

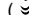If your watch is water-resistant, it will be indicated on the watch face () or on the caseback.


- **Water-Resistant** watch withstands water pressure to 60 p.s.i.a. (equals immersion to 98 feet or 30 meters below sea level) as long as lens, push buttons and case remain intact.
- **50 Meter Water-Resistant** watch withstands water pressure to 86 p.s.i.a. (equals immersion to 164 feet or 50 meters below sea level) as long as lens, push buttons and case remain intact.
- **100 Meter Water-Resistant** watch withstands water pressure to 160 p.s.i.a. (equals immersion to 328 feet or 100 meters below sea level) as long as lens, push buttons and case remain intact. **Although this watch is water-resistant up to a depth of 100 meters, it is not a true professional skin diver watch and should not be used for diving.**

SECTION 2 – GENERAL OPERATION/FEATURES


First acquaint yourself with the location of the four buttons that operate this watch. They are referred to throughout this instruction booklet.

NORMAL TIME MODE

 
- From NORMAL TIME press **[A]** to view CALENDAR. Calendar automatically adjusts for months with less than 31 days. Display will automatically return to NORMAL TIME after 2 seconds.

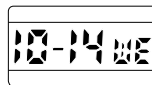

 - From NORMAL TIME mode press **[C]** to view CHRONOGRAPH. Chronograph features lap time, split time, first and second place finishes.

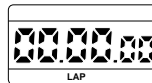

 - From CHRONOGRAPH mode press **[C]** to view ALARM TIME.

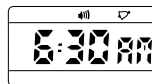

- From ALARM TIME press **[C]** to return to NORMAL TIME.

OTHER FEATURES

- HOURLY CHIME
- 12 or 24 HOUR TIME SYSTEM
- BACKLIGHT for night viewing. Operate by pressing button **[B]**.


SECTION 3 – HOW TO SET TIME/CALENDAR

1. From NORMAL TIME press **[D]** once. SECONDS will be flashing. Press **[A]** to reset seconds to **[00]**. If seconds are at **[30]** or higher before you press **[A]** then minute will advance one unit as well.
2. Press **[C]** to adjust HOURS. Press **[A]** to advance hours. (Look for AM or PM to appear to the right of minutes when in 12 Hour Time only).
3. Press **[C]** to adjust MINUTES. Press **[A]** to advance minutes.
4. Press **[C]** to adjust MONTH (display will change). Press **[A]** to advance month.
5. Press **[C]** to adjust DATE. Press **[A]** to advance date.
6. Press **[C]** to adjust DAY. Press **[A]** to advance day.
7. Press **[C]** to adjust 12/24 HOUR TIME (display will change). Press **[A]** to select 12 or 24 hour time.
8. Press **[D]** to return to NORMAL TIME.

NOTES:




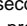 
1. If you wish to adjust only one function (such as hours) merely press **[C]** until that portion of the display begins flashing. Advance by pressing **[A]**. Then return to NORMAL TIME by pressing **[D]** as needed.
2. When in TIME SET mode if no buttons are pressed for 2 minutes, display will automatically return to NORMAL TIME.

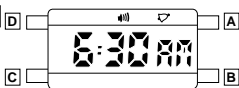SECTION 4 – HOW TO SET ALARM


1. From NORMAL TIME press **[C]**  two times. You are now in ALARM mode. Display will look like this.
2. Press **[D]** to adjust HOURS (this will also arm alarm). Press **[A]** to advance hours.
3. Press **[C]** to adjust TENS OF MINUTES. Press **[A]** to advance tens of minutes.
4. Press **[C]** to adjust MINUTES. Press **[A]** to advance minutes.
5. Press **[D]** to enter ALARM TIME. Press **[C]** to return to NORMAL TIME.

NOTE: If NORMAL TIME is in 24 hour mode, then ALARM TIME will be in 24 hour mode.

HOW TO USE ALARM/HOURLY CHIME

1. From NORMAL TIME press **[C]** two times. ALARM TIME is now visible.
2. Press **[A]** while looking for symbols  and .
3.  represents ALARM. When that symbol is visible above minutes, ALARM IS ARMED. It will sound for 20 seconds every 24 hours unless disarmed. It can be silenced by pressing any button.
4.  represents HOURLY CHIME. when that symbol is visible above or next to AM or PM, the HOURLY CHIME is armed. It will beep every hour on the hour. When CHIME is armed, watch will beep when any button is pressed.

SECTION 5 – HOW TO USE MULTI-MODE CHRONOGRAPH

1. From NORMAL TIME press **[C]**  once. You are now in CHRONOGRAPH mode. Display will look like this. Press **[D]** to select either LAP or SPLIT mode (indicated below line in display).

LAP MODE

1. Press **[A]** to start CHRONOGRAPH operation.
2. Press **[B]** to record lap time. Chronograph automatically begins counting from **[00:00:00]** while displaying lap time.
3. Press **[B]** to release lap time. Chronograph continues running.
4. Press **[A]** to stop chronograph. Word "STOP" appears at right.
5. Press **[B]** to clear chronograph. You are now ready to begin chronograph operation again.

SPLIT MODE

1. Press **[A]** to start CHRONOGRAPH operation.
2. Press **[B]** to record lap time (digits stop advancing, but chronograph continues to run).
3. Press **[B]** to release lap time.
4. Press **[A]** to stop chronograph. Word "STOP" appears at right.
5. Press **[B]** to clear chronograph. You are now ready to begin chronograph operation again.

FIRST AND SECOND PLACE FINISH

1. Press **[A]** to start CHRONOGRAPH operation.
2. Press **[B]** to record first place finish. Chronograph continues to run.
3. Press **[A]** to record (but not view) second place finish.
4. Press **[B]** to view second place finish.
5. Press **[B]** to clear chronograph. You are now ready to begin chronograph operation again.

NOTES:

1. You may use **[A]** to stop/pause in either LAP or SPLIT mode.
2. You may return to NORMAL TIME while chronograph is running by pressing **[C]** twice, but you must be in CHRONOGRAPH mode to start and stop chronograph.
3. Digits are displayed to 1/100 second up to an elapsed time of one hour, thereafter, they are displayed in seconds up to an elapsed time of 12 hours.

SECTION 6 – BATTERY REPLACEMENT

One battery provides the power to operate your Timex watch. To change the battery entails removing the clip which holds it down. To avoid the possibility of permanently damaging the watch, TIMEX STRONGLY RECOMMENDS TAKING YOUR WATCH TO A LOCAL RETAILER OR JEWELER TO HAVE THE BATTERY REPLACED. The battery type required for your watch is indicated on the caseback of your Timex watch.

IMPORTANT NOTE: After replacing the battery, be sure to press the reset button if indicated on the battery clamp.

CAUTION: DO NOT DISPOSE OF OLD BATTERY IN FIRE OR ATTEMPT TO RECHARGE. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.

When installed at the factory, the battery life in this Timex watch is estimated to last 18 months or as specified on the watch package. This estimate is based on the alarm being used one time per day for ten seconds and the light being used one second per day. Battery life may vary depending on your actual usage experience. If after carefully checking the instruction manual for proper starting and setting instructions your Timex watch still fails to operate, have your battery checked and replaced if necessary, or call 1-800-448-4639 concerning battery life.

SECTION 7 – BAND ADJUSTMENT

If your watch has a band similar to the photo below, follow these instructions to adjust the band since the clasp can be damaged if excessive force is used.



1. Open locking plate as shown using nail file, small screwdriver or other blunt instrument.
2. Move clasp to desired band length.
3. While holding the locking plate with your finger and thumb, exert slight pressure and slide the clasp back and forth until you feel the clasp engage in one of the grooves on the underside of the band.
4. Firmly press the locking plate down until it snaps to closed position. If it seems to be difficult to push closed, repeat Step 3 to ensure that you have properly positioned the clasp.

SECTION 10 – SERVICE

If your TIMEX watch should ever need servicing, either send it to Timex addressed as follows:

PRODUCT SERVICE
P.O. Box 2740
Little Rock, AR 72203

or take it to one of our TIMEX Authorized Service Centers located throughout the United States. For the location of the service center nearest you, call 1-800-828-3311. This is a toll-free call from anywhere in the Continental U.S., Puerto Rico, or Hawaii. **For service questions, call 1-800-448-4639.**

For your convenience in obtaining factory service, participating Timex Retailers can provide you with a pre-addressed Watch Repair Mailer.

See the Limited Warranty for specific instructions on the care and service of your Timex watch.

Should you need a strap or band, call 1-800-448-4639.

PLEASE NOTE: IF YOU WANT ADDITIONAL ASSISTANCE OR TIPS ON SETTING YOUR WATCH, YOU MAY CALL 1-501-370-5709 FOR A PRE-RECORDED MESSAGE.

LIMITED WARRANTY

The Basic Coverage: This TIMEX Quartz Digital L.C.D. (liquid crystal display) watch (but not any battery, lens, band or strap) is warranted to the owner for a period of **ONE YEAR** from the date of purchase against defects in manufacture by Timex Corporation - not by the dealer from whom the watch was purchased.

What Timex Will Do: If this watch develops such a defect within the one year period, it will be repaired (i.e., a new or thoroughly reconditioned and inspected module will be installed) or replaced (a watch of equal value and similar appearance will be supplied) at our option, provided it is returned with a \$5.00 check or money order to cover costs of postage, handling and service, and you provide proof of purchase and date of purchase.

This Limited Warranty Does Not Cover:

- 1) Timex will not repair defects related to servicing not performed by Timex Corporation or a Timex Authorized Service Center.
- 2) Timex will not provide any warranty service if your watch shows evidence that it has been tampered with, misused, abused, or altered; for example:
 - moisture damage sufficient to affect the proper function of the watch;
 - damage to the case; or
 - visible cracking of the lens.
- 3) Timex reserves the right to charge you for a replacement battery, if the battery in your watch is depleted. No additional charge will be made unless the one year warranty period has expired or servicing is necessary for reasons beyond our control, in which case a moderate charge will be made.
- 4) TIMEX IS NOT LIABLE FOR INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental, special or consequential damages, so the above exclusion or limitation may not apply to you.

Your Rights Under Implied Warranties and State Law: THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER EXPRESSED WARRANTIES, OBLIGATIONS OR LIABILITIES. TIMEX LIMITS THE DURATION OF ANY WARRANTY IMPLIED BY STATE LAW, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Care of Your Watch:

- Avoid exposing your watch to water, steam, or other forms of moisture.
- If the lens becomes damaged, have it replaced at once to avoid damage to the module.
- When your battery is depleted, have it replaced promptly. The particular type of battery required is indicated on your caseback. You can get them from your local Timex retailer or from a Timex Authorized Service Center.

Service of Your Watch:

If your TIMEX watch should ever need servicing, either send it to Timex addressed as follows: PRODUCT SERVICE

P.O. Box 2740
Little Rock, AR 72203

or take it to one of our Timex Authorized Service Centers located throughout the United States. In the U.S., call toll-free **1-800-828-3311** for the nearest service center. Any Timex Authorized Service Center outside the United States will honor this limited warranty. You can determine service center locations outside the U.S. by consulting any local Timex dealer.

Because of possible loss, we recommend insuring your watch, return receipt requested, when using the mails. If you do not obtain a receipt within a reasonable time, start a tracer through the originating post office. NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER ARTICLE OF PERSONAL VALUE IN YOUR SHIPMENT. PLEASE NOTE THAT WE MAY SUBSTITUTE A WATCH OF EQUAL VALUE AND SIMILAR APPEARANCE FOR YOURS ON BOTH IN-WARRANTY AND OUT-OF-WARRANTY REPAIRS.

For your convenience in obtaining factory service, participating Timex retailers will be pleased to provide you with a postage-paid, pre-addressed Watch Repair Mailer.

TIMEX is a trademark and a service mark of Timex Corporation.
REG. U.S. PAT. & TM. OFF.