

TIMEX

UFC KNOCKOUT

[USER GUIDE](#) ..... 1

991097399 4.14.23

Register your product at <https://www.timex.com/product-registration.html>

## Operating Instructions



### Features and Functions:

 
- Time and Date
- Alarm and hourly chime
- 1/100 second chronograph up to 10 hours
- UFC five minute round timers, three or five round options
- Timer up to 24 hours
- Indiglo backlight

### Function Modes:

- Pressing Mode button will change to next function
- Press and hold Start button for 3 seconds to switch time zone between Time 1 and Time 2
- Press Light button to turn on Indiglo backlight for 3 seconds

## Time and Date Setting Mode:

From normal Time mode press and hold the Set button for 3 seconds to enter Time Setting:

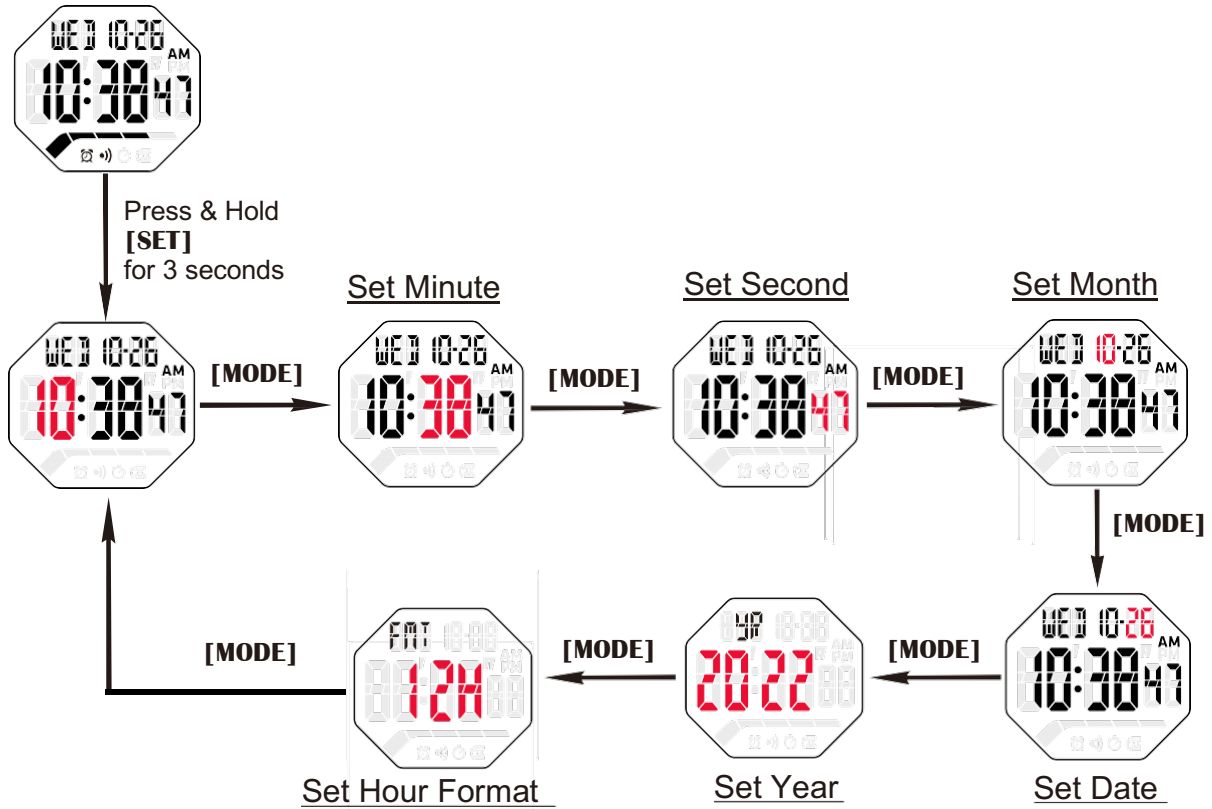

1. When in Time Set mode, press Mode button to change the settings with the sequence Hour-->Minute-->Second-->Month-->Date-->Hour Format.
2. When setting Hour, Minute, Month, Date and Year, press Start button to increase the setting or long press/hold button to increase more quickly.
3. When setting Hour format, press Start button to change hour format between 12H and 24H.
4. When finished setting time and date press Set button to end.


## Chronograph Mode:



1. Press Mode button until you reach mode "Timer"
2. Press Start button to start chronograph
3. When Chronograph is running, press Set button to enter split mode, chronograph time is still

- counting but it is not refreshed in display. After 5 seconds, the display is resumed automatically.
- 4. When Chronograph is running, press Start button to stop, and press this button again, chronograph will continue.
- 5. When Chronograph is stopped, press and hold Set button for 3 seconds to clear the running time.


**Timer Mode:**

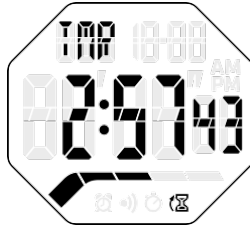

- 1. Press Mode button until you reach mode Timer
- 2. Press Start button to start Timer running
- 3. When Timer is running, press Start button to stop it, and press this button again, Timer will continue to run.
- 4. When Timer is stopped, press Set button to reset the timer to preset value.

**Setting Timer:**

 When Timer is not running, hold Set button for 3 seconds to enter Timer Set mode to adjust the preset time value. as below:

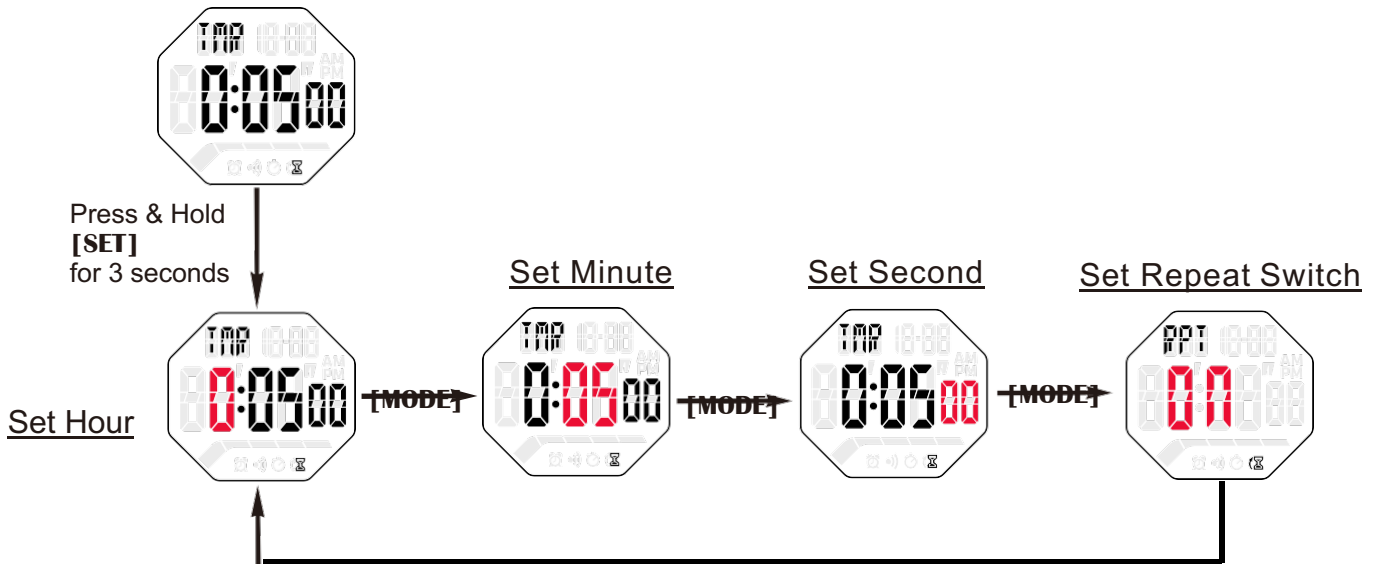


## [MODE]

1. In Timer Set mode, press Mode button to change the setting with sequence Hour-->Minute-->Second--> Repeat Count Switch.
2. When setting Hour, Minute and Second, press Start button to increase the value, long press of this button for 1 second then start to fast adjust setting value.
3. When setting Repeat Count Switch, press Start button to enable / disable Timer repeat.
4. In setting mode, press Set button to save settings.

### UFC Round Timer:


There are two types of UFC Timers, UFC-3 and UFC-5. All operation for these two timers are the same, the only difference is, for UFC-3 Timer, there are 3 rounds and for UFC-5 Timer, there are 5 rounds.

For each round, the preset time is fixed to 5 minutes with a 1-minute rest time between each round.

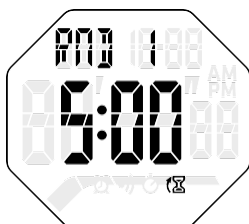


1. Press Mode button until you reach UFC-3 Timer, press Mode button again to change to UFC-5 Timer.
2. Press Start button to start the UFC Timer running. when one round is counted done, there is a 1-minute rest and the next round begins automatically.
3. When UFC Timer is running, press Start button to pause the countdown, and press the Start button again to resume it. In stopped mode, hold the Set button for 3 second to reset the time to initial time set.

## Alarm Mode:

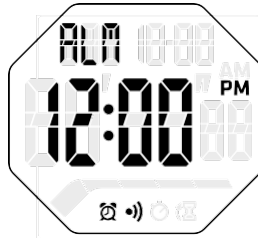

Press Mode button until you reach Alarm mode, hold the Set button for 3 seconds to enter Alarm time Set state the detail as below:

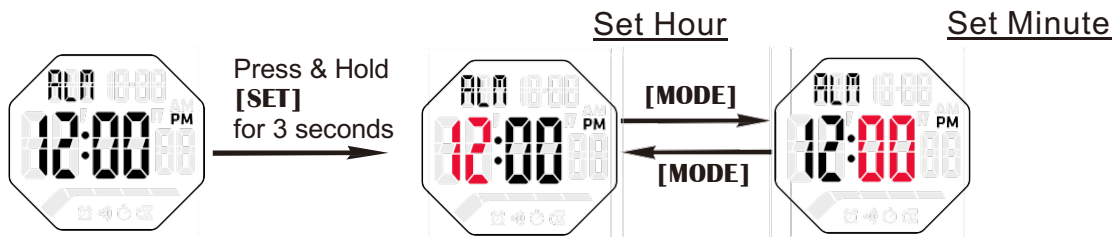

1. In Alarm time set, press the Mode button to change the setting between Hour and Minute. Press the Start button to increase the setting value.
2. In setting mode, press the Set button and all setting are saved.

## Battery Replacement

When the display dims or no display, please replace with CR2032 or equivalent battery. After each battery change, please reset the module by touching the AC position with a metal rod or small metal tool for 2 to 3 seconds.

### EXTENDED WARRANTY

**Available in U.S. only.** Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800-448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.

©2023 Timex Group USA, Inc. TIMEX and INDIGLO are registered trademarks of Timex Group USA, Inc and its subsidiaries.