



LA PRÉCISION DU STYLE

THE BEST OF SWISS PRECISION AND FRENCH STYLE / GCWATCHES.COM

INSTRUCTION MANUAL

CHRONOGRAPH 2, 6, 10 THREE-EYE 1/5 SEC

OUR STORY - THE PRECISION OF STYLE

Over 20 years ago, our French-born founder, famous designer Paul Marciano, dreamed of creating a unique watch brand with a central aspiration in mind:

ICONIC EUROPEAN TIMEPIECES OF EXCEPTIONAL QUALITY AND STYLE TO BE WORN AS BOLD PERSONAL STYLE STATEMENTS

Gc combines the very best in Swiss precision with the sophistication of French style to produce bold statement timepieces. Urbane, distinct and alluring, Gc watches are crafted to be as striking and unique as the individuals who wear them. Our dedication to bold style and elevated quality is a mark of true distinction in the watch industry and sets the brand apart.

Gc believes in empowering people to find their own style and to lead where others follow. Reflecting a European heritage that encourages self-expression, Gc designs watches that embrace and celebrates your personal style.



“La Précision du Style” defines our passion for the best of Swiss Precision and French style.

WATCH FEATURES:

SCREW DOWN CROWN

Screw down crowns are used to ensure water resistance. Do NOT pull crown unless it is unscrewed first

- UNSCREW the crown counter-clockwise (towards you) until it turns freely without tension.
- GENTLY pull the crown out to desired position for watch setting (see specific operating instructions on following pages).
- When finished setting the watch, GENTLY push the crown in towards the watch.
- While pushing in on the crown, begin to turn clockwise (away from you) until it is SECURELY screwed down.

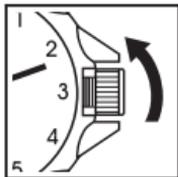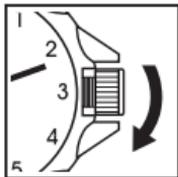

NOTE: Failure to securely screw down the crown after setting the watch may affect its water resistance.

WATER RESISTANCE

Your watch is water resistant to the depth noted on the caseback. If exposed to salt or chemical water, please rinse the watch with fresh water and wipe with a soft, dry cloth.

Guidelines:

30 M/3 ATM/100 Ft. - Accidental splashes. Not suitable for swimming

50 M/5 ATM/165 Ft. - Suitable for swimming in shallow water


100 M/10 ATM/330 Ft. - Suitable for swimming and snorkelling

200 M/20 ATM/660 Ft. - Suitable for recreational scuba diving

300 M/30 ATM/1000 Ft. - Suitable for professional diving

CHRONOGRAPH

2,6,10 THREE-EYE CHRONO 1/5 SEC

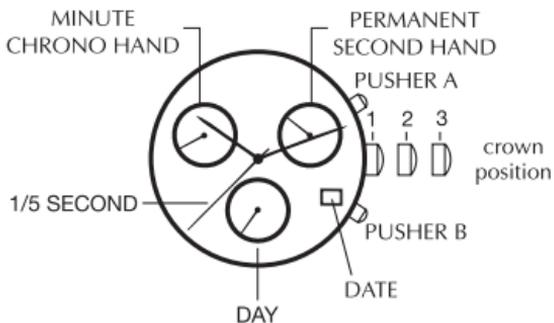

These chronograph watches have 3 functions:

TIME:

To set the time:

1. PULL crown to position 3.
2. TURN crown either way to correct time (same for Day when this function is available).
3. PUSH back crown to position 1.

CALENDAR:

1. PULL crown to position 2.
2. TURN crown clockwise to correct calendar.
3. PUSH back crown to position 1.

NOTE: do not use “quick change” correction for the calendar between 09:00 p.m. and 00:30 a.m.

STOPWATCH:

The stopwatch is capable of measuring:

1. One minute elapsed up to 30 minutes.
2. Chronograph hand $1/10$ or $1/5$ second.

STANDARD STOPWATCH MEASUREMENT:

1. PRESS pusher A to start timing
2. PRESS pusher A to stop timing
3. PRESS pusher B to reset

ACCUMULATED ELAPSED TIME MEASUREMENT:

1. PRESS pusher A to start timing
2. PRESS pusher A to stop timing
3. PRESS pusher A to restart timing
4. PRESS pusher A to stop 2nd timing
5. PRESS pusher B to reset

SPLIT TIME MEASUREMENT:

1. PRESS pusher A to start timing
2. PRESS pusher B to 'split'
3. PRESS pusher B to begin again
4. PRESS pusher A to stop
5. PRESS pusher B to reset

TIMING 2 COMPETITORS:*

1. PRESS pusher A to start timing of 1st event
2. PRESS pusher B to stop timing of 1st event; stopwatch continues to run internally
3. PRESS pusher A to start timing of 2nd event
4. PRESS pusher B to view time of 2nd event
5. PRESS pusher B to reset

** Note : not available for 2,6,10 THREE-EYE CHRONO 1/5 SEC*

CORRECTIVE MODE FOR STOPWATCH CHRONO HANDS

On all Chrono movements, if the largest hands do not reset perfectly back to the 12 o'clock or zero position:

1. PULL crown to position 3.
2. If center stopwatch second hand or Chrono hands do not reset to the 12 o'clock or zero position, press pusher A and B simultaneously for at least 2 seconds.
3. The center stopwatch second hand will rotate by 360 degrees to activate corrective mode.

4. If center stopwatch second hand or Chrono hands are not located at '12' or '0' position, either press pusher A continuously or repeatedly until the center stop second hand moves by each interval and returns to '12' and '0' position. Press pusher B once to activate corrective move of next minute Chrono hand, hour Chrono hand, or 1/10 second Chrono hand. Press pusher A continuously or repeatedly until the minute Chrono hand and hour Chrono hand or 1/10 second Chrono hand moves by each interval and returns to '12' and '0' position.
5. PUSH back crown to position 1 to activate the adjustment.

WARRANTY

Your Gc watch is covered by an international guarantee against any manufacturing defects for a period of 24 months* from the date of purchase indicated on the guarantee card. Any part found to be defective within this period will be repaired or replaced at no charge. In order to benefit from this guarantee, you will be required to present the Gc Watches international guarantee certificate, duly completed, dated, stamped and signed by an authorized Gc Watches retailer.

THE Gc WATCHES INTERNATIONAL GUARANTEE CERTIFICATE DOES NOT COVER:

- Defects arising from damage, mishandling, incorrect or abusive use (knocks, crushing, moisture in the case of non water resistant watches), alteration or repairs not performed by an authorized Gc Watches retailer
- Leather straps or bracelets
- Batteries
- Normal wear of base metal, surface-coated watches
- Theft or loss of the complete watch or components

*We offer a Two Year Warranty on all purchases made from July 1st, 2017.

USA & CANADA: Any purchases made prior to July 1st, 2017 hold a 10 Year Limited Warranty.